



Canon PowerShot A630 Front Panel Replacement

You may want to replace the front panel of your camera if it is damaged. Removal of the front panel is also a prerequisite step for replacement of other internal camera components. This guide will help you replace the front panel of your camera

Written By: Kelly Duggan






TOOLS:



- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Front Panel

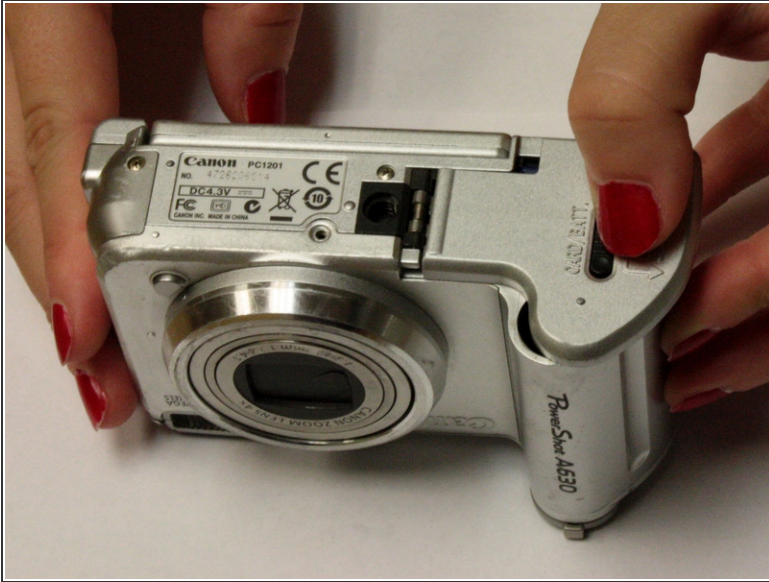


- Open the battery door by sliding the tab on the battery door while pushing the battery door away from the camera.
- Remove batteries.

Step 2

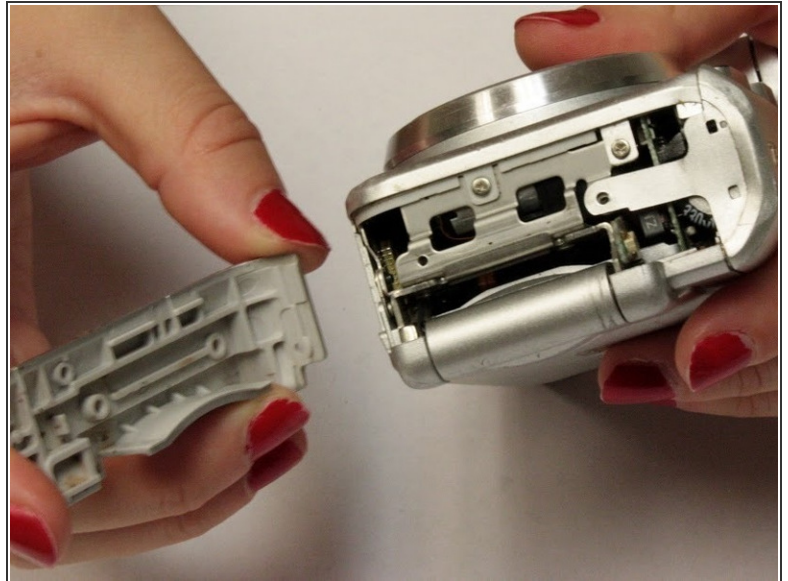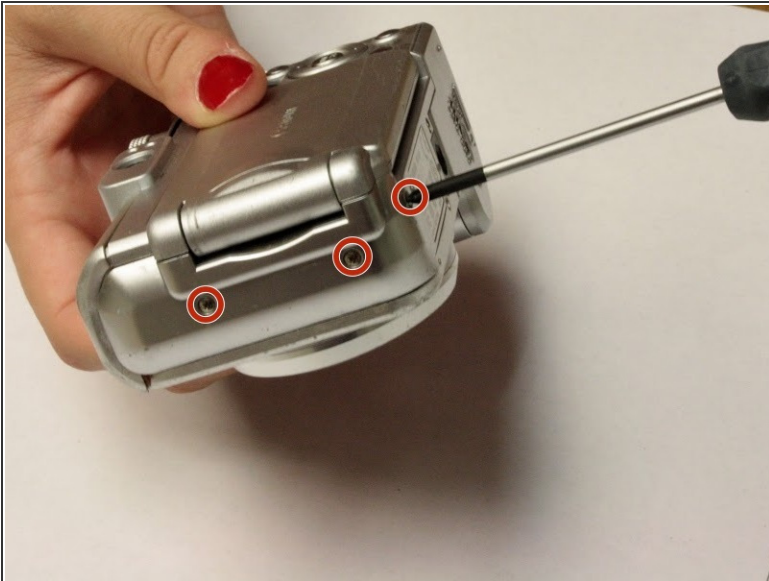



- Remove the three indicated .2mm screws using a Philips #00 screwdriver.
- Gently pull off side-panel to remove it.

Step 3

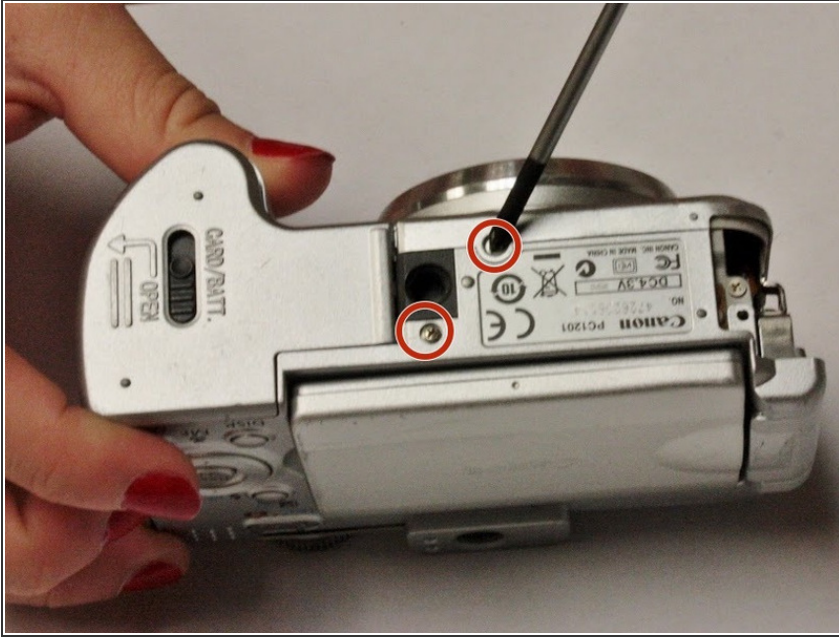

- Remove the two indicated .2mm screws using a Philips #00 screwdriver.

Step 4

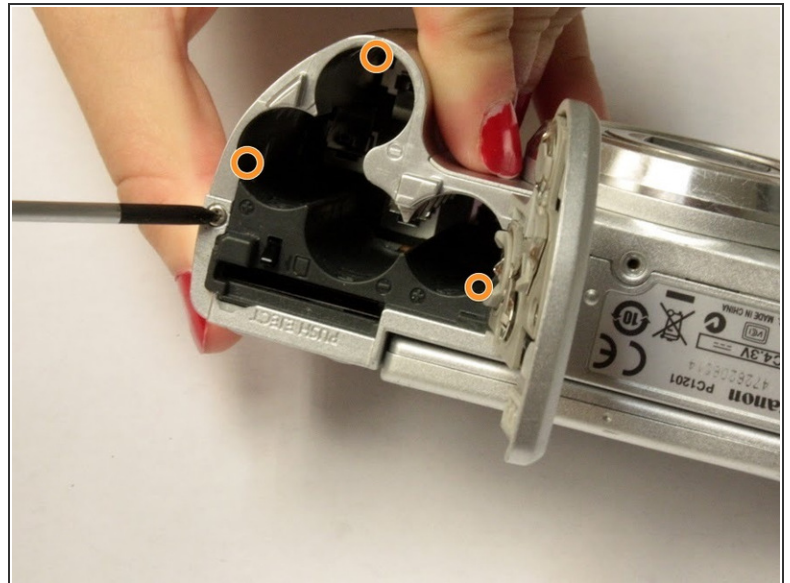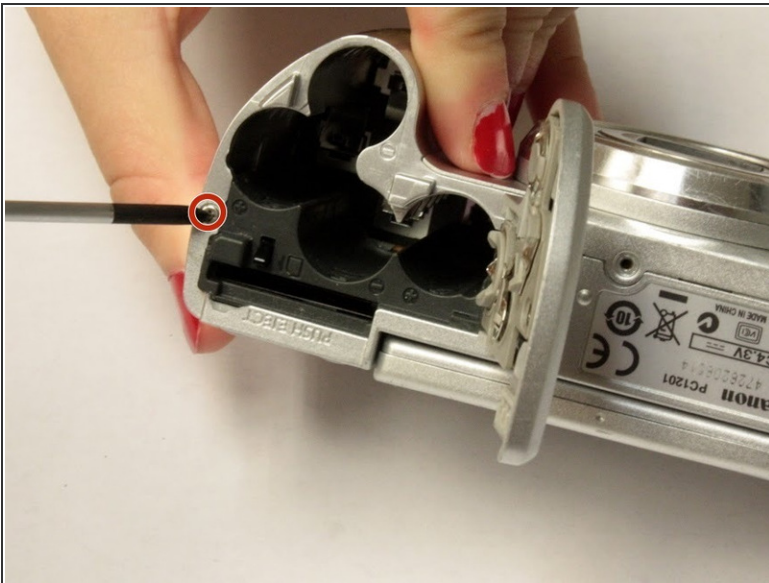


- Remove the indicated .2mm screw using a Philips #00 screwdriver.
- Remove the three .2mm screws located on the internal side of the top panel within the battery chamber using a Philips #00 screwdriver.

Step 5




- Open 'DIGITAL A/V OUT' door on camera.
- Remove the two indicated .2mm screws using a Philips #00 screwdriver.

Step 6

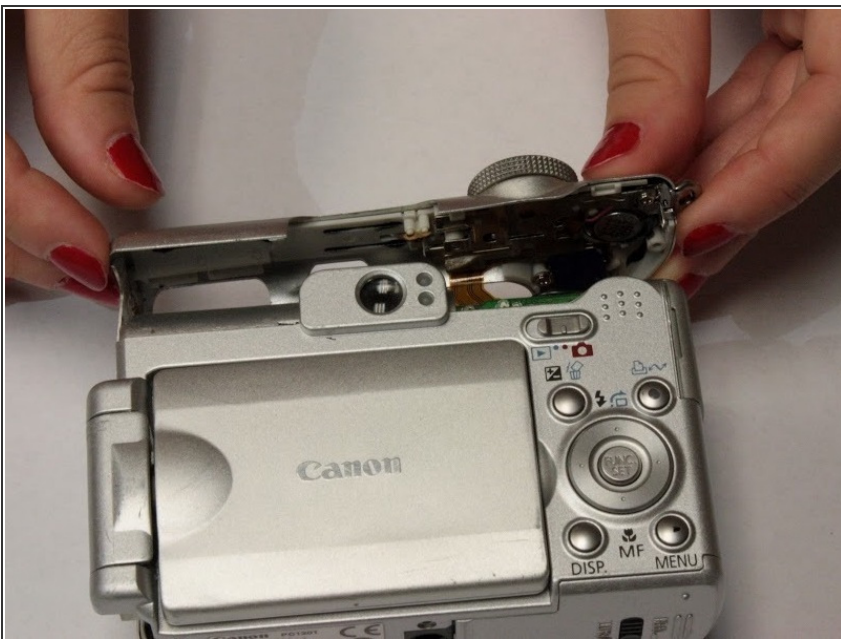

- Grip the sides of the top panel and gently pull to separate the top panel from the camera body.
- ⓘ The top panel will not completely detach.

Step 7

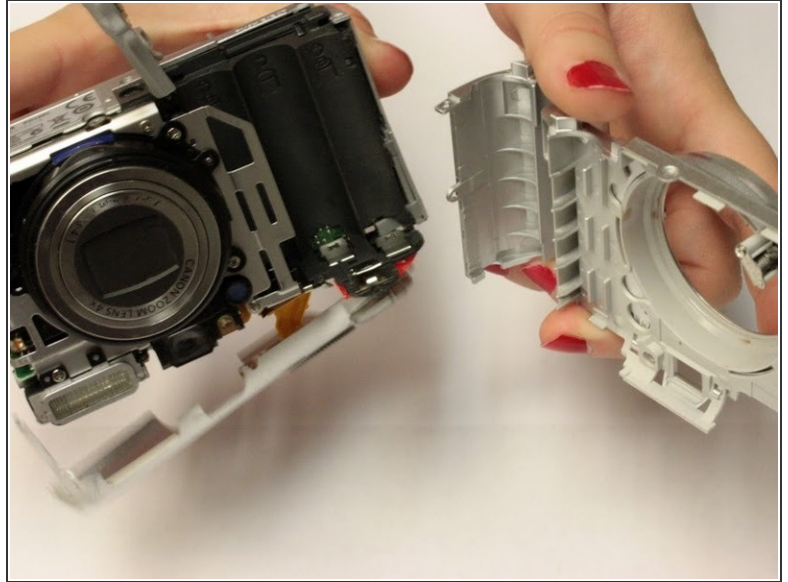

- Gently pull the front an back panels apart and use a Philips #00 screwdriver to remove the screw connecting the panels.
- Gripping the top and bottom, gently pull the front panel away from the camera body to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 11:05:56 PM.